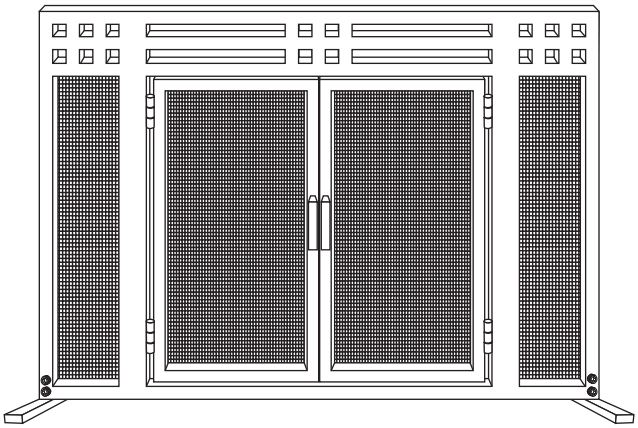

ITEM # : XXXXXX
MODEL # : DS-21005

Use and Care Guide

Layton Fireplace Screen

Assembly

Ref.#	Description	Qty.
A	Fire Screen	1
B	Feet	2
C	Bolt	4
D	Hex Wrench	1

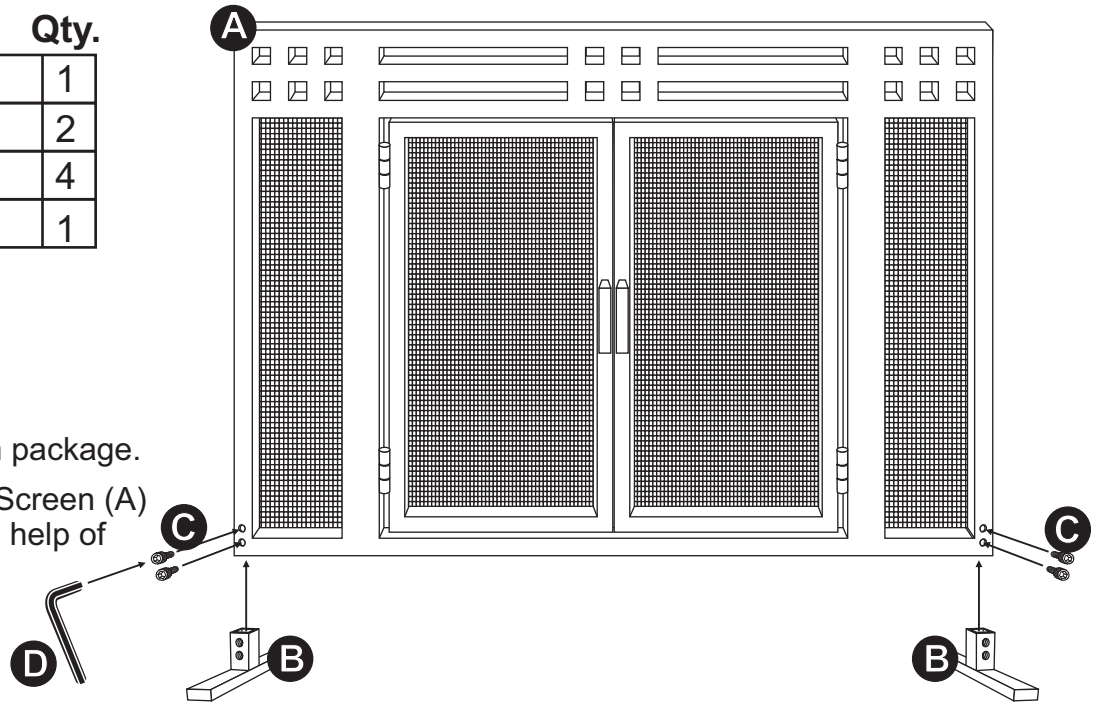

INSTRUCTIONS:

1) Remove all contents from package.
2) Attach the feet (B) to the Screen (A) using the bolt (C) with the help of Hex Wrench (D)

Safety Information

- Do not allow children to play with or around screen.
- Do not attempt to clean the screen while it is hot.
- When screen is in use, do not touch with bare hands.
- Use heat-resistant fireplace gloves when moving or adjusting screen.
- Make sure screen is large enough to completely cover fireplace opening.

Care and Cleaning

- After screen has cooled down, Lay screen on towel or soft surface and wipe with a soft clothe to prevent scratches or damage to finish.
- To store, fold screen together, place it in box and secure.

Warranty

This product carries no warranty.

For questions or concerns about this product, contact the Customer Service Team 8:00 a.m. to 5:00 p.m. EST at 1-866-397-9312 or visit www.HomeDepot.com.

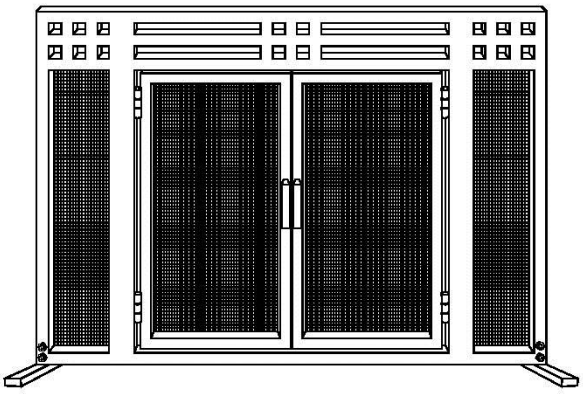

ARTÍCULO NÚM : XXXXXX
MODELO NÚM : DS-21005

Guía de Uso y Mantenimiento

Pantalla Para Chimenea Layton

Ensamblaje

Ref. Núm.	Descripción	Cant.
A	Pantalla de Malla	1
B	Patas	2
C	Perno	4
D	Llave Hexagonal	1

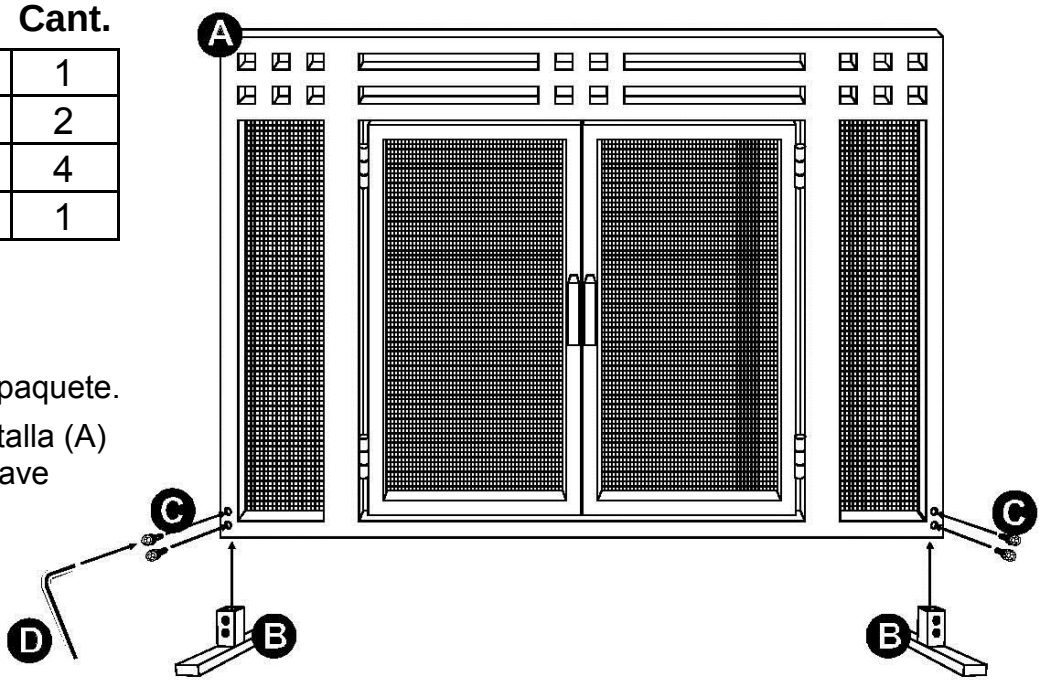

INSTRUCCIONES:

1) Quita todos el contenido del paquete.
2) Sujeta las patas (B) a la Pantalla (A) usando los pernos (C) y la Llave Hexagonal (D)

Información de Seguridad

- No permitas que los niños jueguen con o cerca de la pantalla.
- No intentes limpiar la pantalla cuando esté caliente.
- No toques la pantalla con las manos descubiertas cuando esté en uso.
- Usa guantes para chimenea resistentes al calor para mover o acomodar la pantalla.
- Asegúrate de que la pantalla sea lo suficientemente grande para cubrir la abertura de la chimenea completamente.

Mantenimiento y Limpieza

- Después de que la pantalla se haya enfriado, apóyala sobre una toalla o superficie suave y límpiala con un paño suave para evitar rayar o dañar el acabado.
- Para almacenar la pantalla, dóblala, guárdala en un caja y colócala en un sitio seguro.

Garantía

Este producto no tiene garantía.

Si tienes preguntas o inquietudes acerca de este producto, comunícate con el Equipo de Servicio al Cliente de 8:00 a.m. to 5:00 p.m. (Hora del Este de EE.UU.), llamando al 1-866-397-9312 o visita www.HomeDepot.com.